



2018+ Wrangler/2020+ Gladiator Default Settings


AMPLIFIERS PRE-TUNED: NO ADJUSTMENT NECESSARY

The amplifiers included in your kit are already configured for optimum performance with factory source units. No adjustment is needed unless using an aftermarket source unit. Please use our C.L.E.A.N. setup procedure to match the INPUT LEVEL on both amplifiers to the aftermarket source unit and leave the remaining amp settings as shown below. Download the "RF Connect" App for test tones & instructions.




M5-800X4

These are the default amplifier settings for the M5-800X4.
Adjusting these settings will void your warranty.

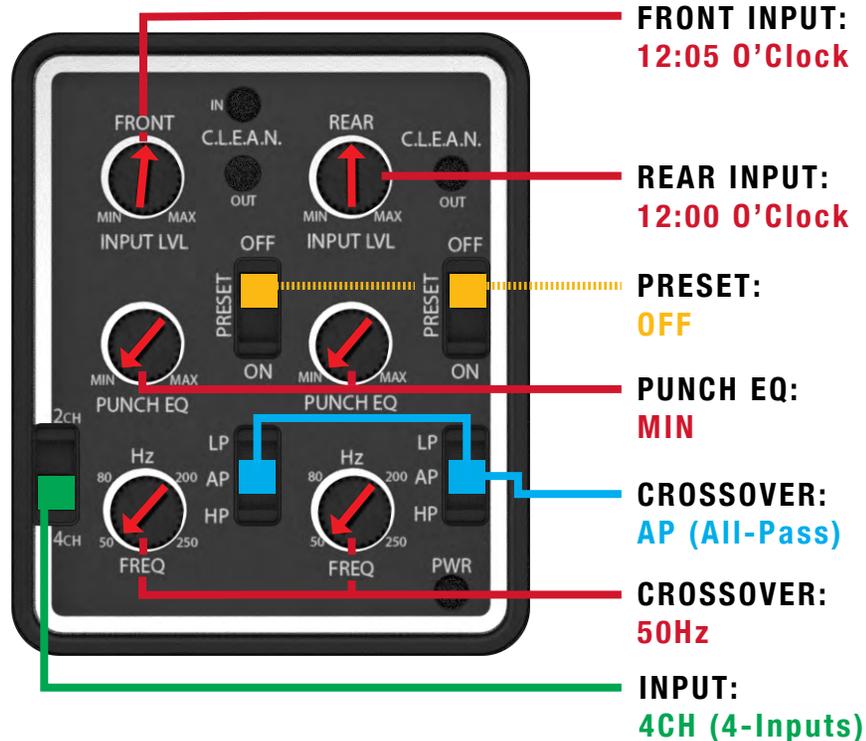

M5-1000X1

These are the default amplifier settings for the M5-1000X1.
Adjusting these settings will void your warranty.

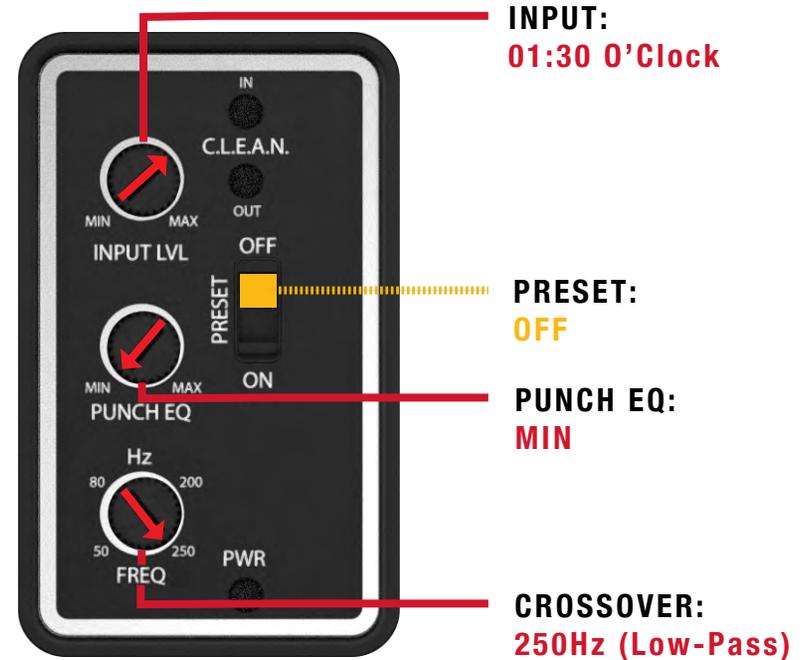

BASE RADIO

BALANCE/FADER

Start with BALANCE and FADER settings to center position, then adjust to your personal preference.



EQUALIZER

Set LOW, MID, BASS to their centered position. Keep settings within $-/+2$ dB to prevent potential speaker damage.



SPEED VOLUME

Set SPEED ADJUSTMENT VOLUME to OFF position to prevent potential speaker damage.



PREMIUM RADIO

BALANCE/FADER

Start with BALANCE and FADER settings to center position, then adjust to your personal preference.



EQUALIZER

Set LOW, MID, BASS to their centered position. Keep settings within $-/+2$ dB to prevent potential speaker damage.



SPEED VOLUME

Set SPEED ADJUSTMENT VOLUME to OFF position to prevent potential speaker damage.

