



# 2018+ Wrangler/2020+ Gladiator Default Settings

## AMPLIFIERS PRE-TUNED: NO ADJUSTMENT NECESSARY


The amplifiers included in your kit are already configured for optimum performance with factory source units. No adjustment is needed unless using an aftermarket source unit. Please use our C.L.E.A.N. setup procedure to match the INPUT LEVEL on both amplifiers to the aftermarket source unit and leave the remaining amp settings as shown below. Download the "RF Connect" App for test tones & instructions.



### M5-800X4

These are the default amplifier settings for the M5-800X4.


**Adjusting these settings will void your warranty.**

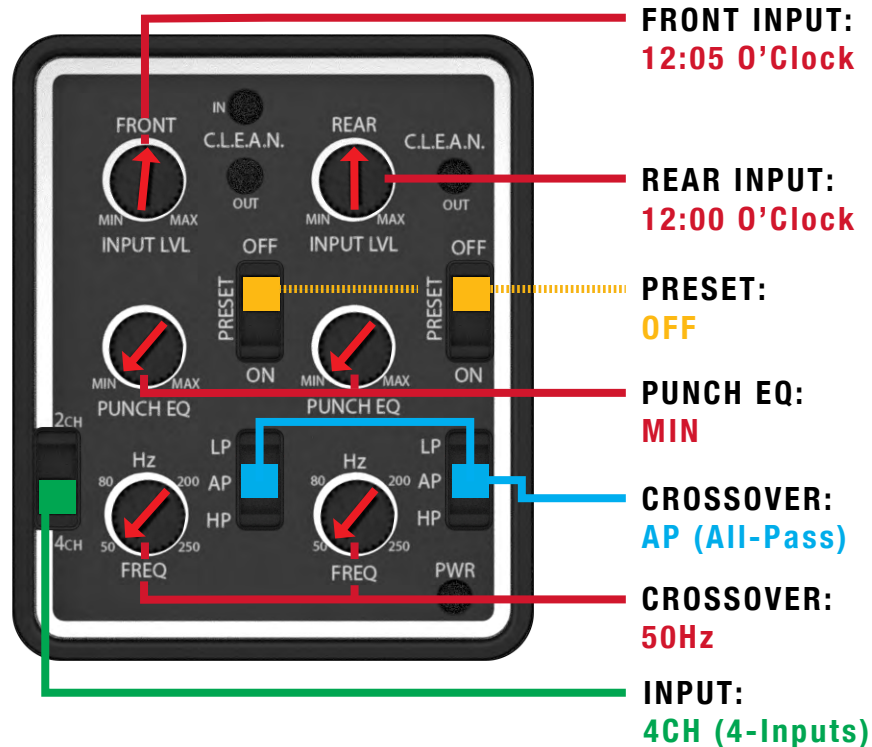

### M5-1000X1

These are the default amplifier settings for the M5-1000X1.

**Adjusting these settings will void your warranty.**

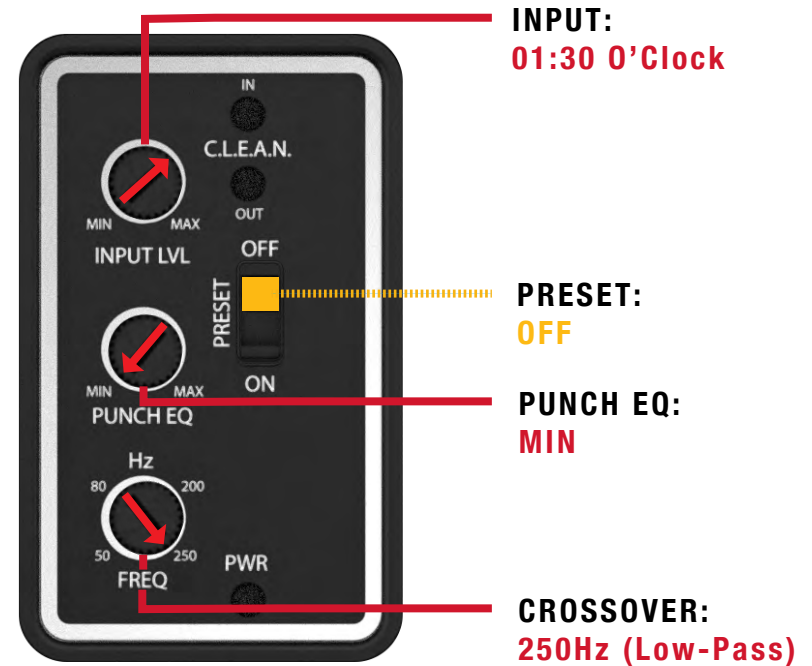

## BASE RADIO


### BALANCE/FADER

Start with BALANCE and FADER settings to center position, then adjust to your personal preference.



### EQUALIZER

Set LOW, MID, BASS to their centered position. Keep settings within  $\pm 2$  dB to prevent potential speaker damage.

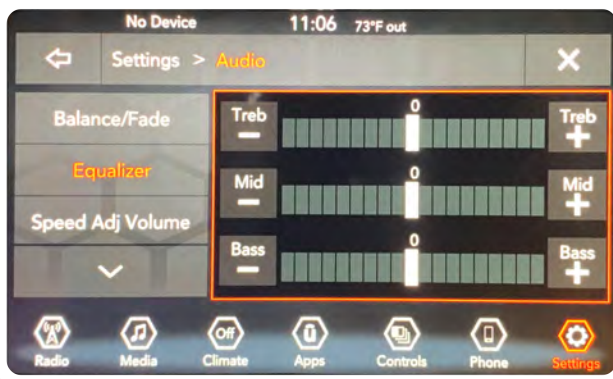

### SPEED VOLUME

Set SPEED ADJUSTMENT VOLUME to OFF position to prevent potential speaker damage.



## PREMIUM RADIO

### BALANCE/FADER

Start with BALANCE and FADER settings to center position, then adjust to your personal preference.



### EQUALIZER

Set LOW, MID, BASS to their centered position. Keep settings within  $\pm 2$  dB to prevent potential speaker damage.



### SPEED VOLUME

Set SPEED ADJUSTMENT VOLUME to OFF position to prevent potential speaker damage.





# 2018+ Wrangler/2020+ Gladiator Factory Radio Programming

**IMPORTANT:** After installing the Rockford Fosgate kit, we program the factory radio to load the DSP tune. This puts the radio into “amplified mode”, changing the outputs from high-level to low-level for use with external amplifiers.

## BASE RADIO

1. Using the keyfob, lock and unlock the vehicle.
2. Get in vehicle and close the door. Verify emergency brake is OFF.
3. With foot off the brake, push StartStop TWICE to enter RUN mode.
4. Within 5 seconds, cycle the Parking Brake ON-OFF-ON. Horn will honk (1) time to confirm you are in programming mode.
5. Within 10 seconds, activate the **LEFT** turn signal (down) to add the amp and load the DSP tune. Horn will honk (1) time to confirm.
6. You will hear (2) horn honks to confirm the radio is initiating program sequence to “low level” output mode.
7. Wait. Radio will reboot twice automatically. Do not open any doors or turn the vehicle off during this time. Once radio has finished rebooting, test for output, including adjusting bass level control.

## PREMIUM RADIO

1. Close all doors, reconnect battery cables, with the (-) terminal last.
2. Close the hood and latch it.
3. Press the keyfob lock button TWICE to lock the vehicle.
4. Let the vehicle sit uninterrupted for around 20 mins.
5. Be sure to take the keyfob into your house away from the vehicle.
6. Once the initialization is complete, you'll see the backlight on the Bass Level Control turn-off.
7. This concludes “Program Mode”. You can now unlock the vehicle and open the doors.

## BASE RADIO FACTORY RESET

1. Turn ignition ON.
2. Within 5 seconds, cycle Parking Brake ON-OFF-ON. Horn will honk (1) time to confirm you are in programming mode.
3. Within 10 seconds, activate **RIGHT** turn signal (up) to revert radio to factory non-amplified mode. Horn will honk (1) time to confirm.
4. Wait. The radio should reboot twice, and horn will honk:
  - 2 times : Amplified mode
  - 3 times : Non-Amplified mode
  - 5 times : Failed to program